


B-3a MOTEUR KL ■ SYSTEME DE COMMANDE DU MOTEUR ■ SYSTEME D'ALLUMAGE

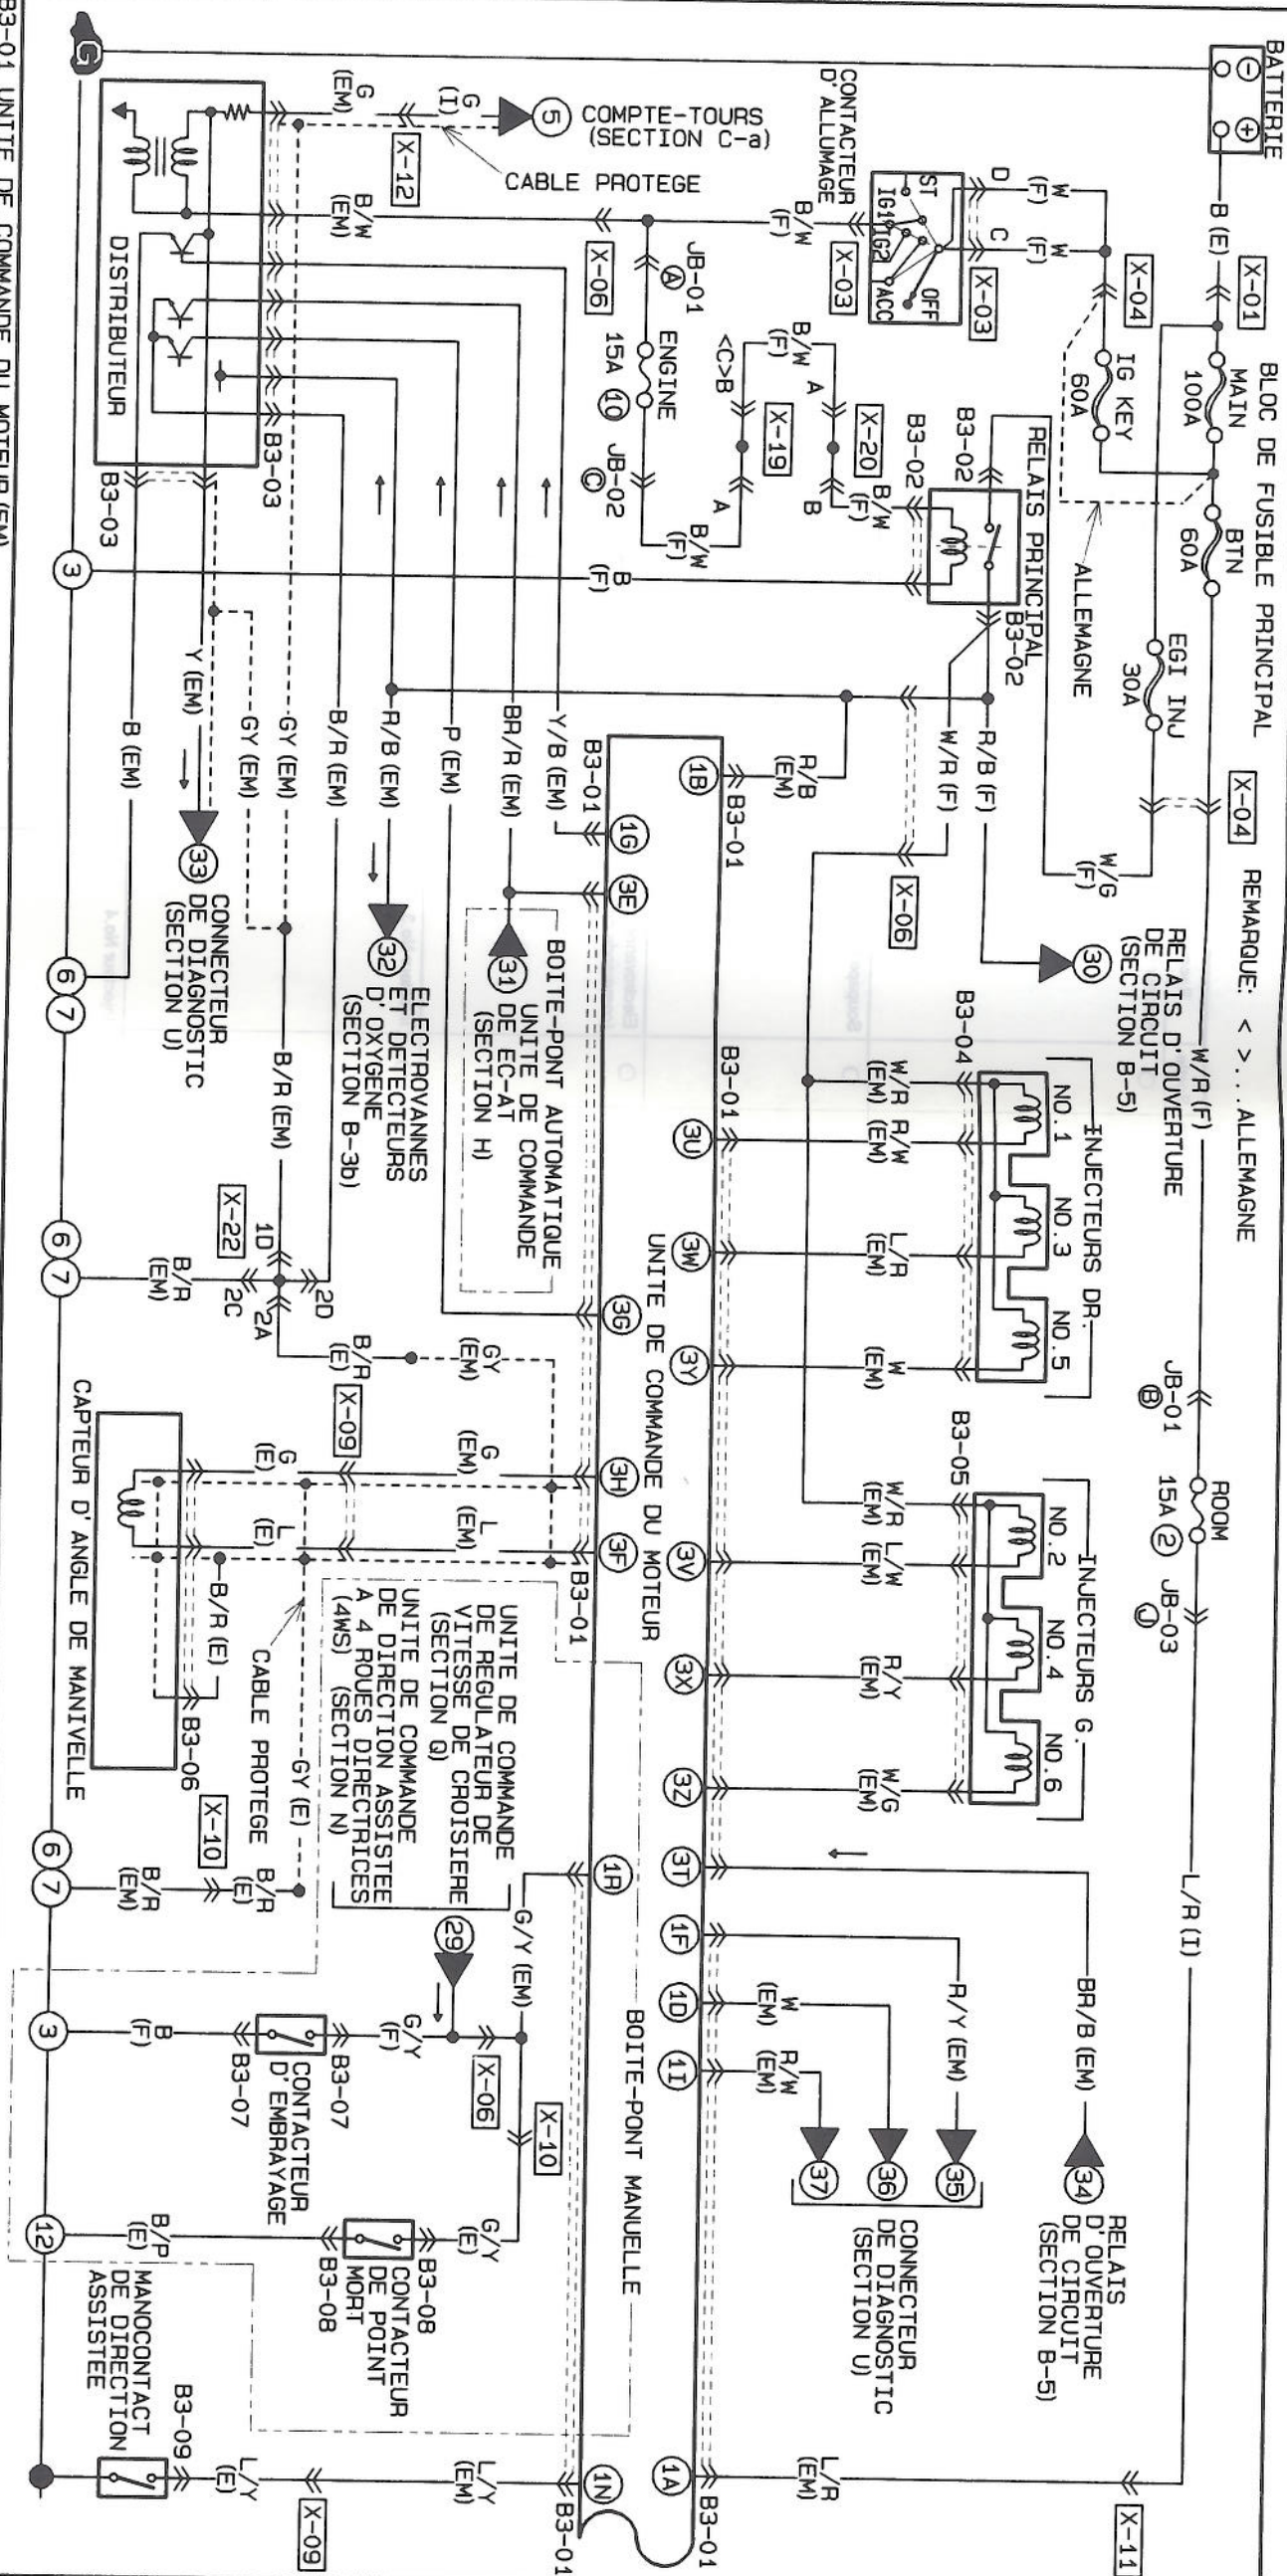

B3-02 RELAIS PRINCIPAL (F)

B3-03 DISTRIBUTEUR (EM)

1U	1S	1Q	1O	1M	1K	1J	1G	1E	1C	1A	20	2M	2K	2I	2G	2E	2C	2A	3Y	3M	3U	3S	3Q	3O	3M	3K	3I	3G	3E	3C	3A
B/R	*	W/G	G/B	G/R	(V/L)	*	R/W	Y/B	*	B/L	L/W	W	GY/B	Y/R	P/L	R/G	Y	*	W	L/R	R/W	*	GY/R	P/B	GY/G	*	GY	P	BR/R	B/R	B
(L)	BR	G/Y	L/B	L/Y	G/W	Y/G	R/W	R/Y	W	R/B	W/B	*	B/Y	LG	B/W	Y	G	(G/O)	W/G	R/Y	L/W	BR/B	*	W/L	R	L/O	L/R	G	L	B/L	B
1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B	2P	2N	2L	2U	2H	2F	2D	2B	3Z	3X	3V	3T	3R	3P	3N	3L	3J	3H	3F	3D	3B

() ... BOITE-PONT AUTOMATIQUE

B3-02 RELAIS PRINCIPAL (F)

W/G	B/W	R/B	B
-----	-----	-----	---

B3-03 DISTRIBUTEUR (EM)

Y/B	B	P	BR/R	R/B	B/R
-----	---	---	------	-----	-----

B3-04 INJECTEURS DR. (EM)

L/R	R/W
-----	-----

B3-05 INJECTEURS G. (EM)

W/R	L/W	R/Y	W/G
-----	-----	-----	-----

B3-06 CAPTEUR D'ANGLE DE MANIVELLE (E)

G	L	B/R
---	---	-----

B3-07 CONTACTEUR D'EMBRAYAGE (F)

G/Y	B
-----	---

B3-08 CONTACTEUR DE POINT MORT (E)

G/Y	B/P
-----	-----

B3-09 MANOCONTACT DE DIRECTION ASSISTEE (E)

L/Y
